
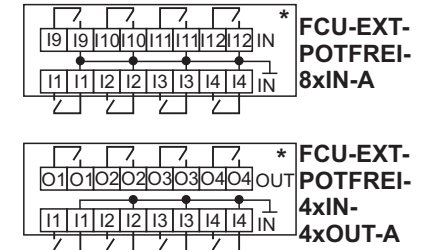


Attention:
Before starting any maintenance jobs, the control and the switching load extension must be separated from the mains at all poles!

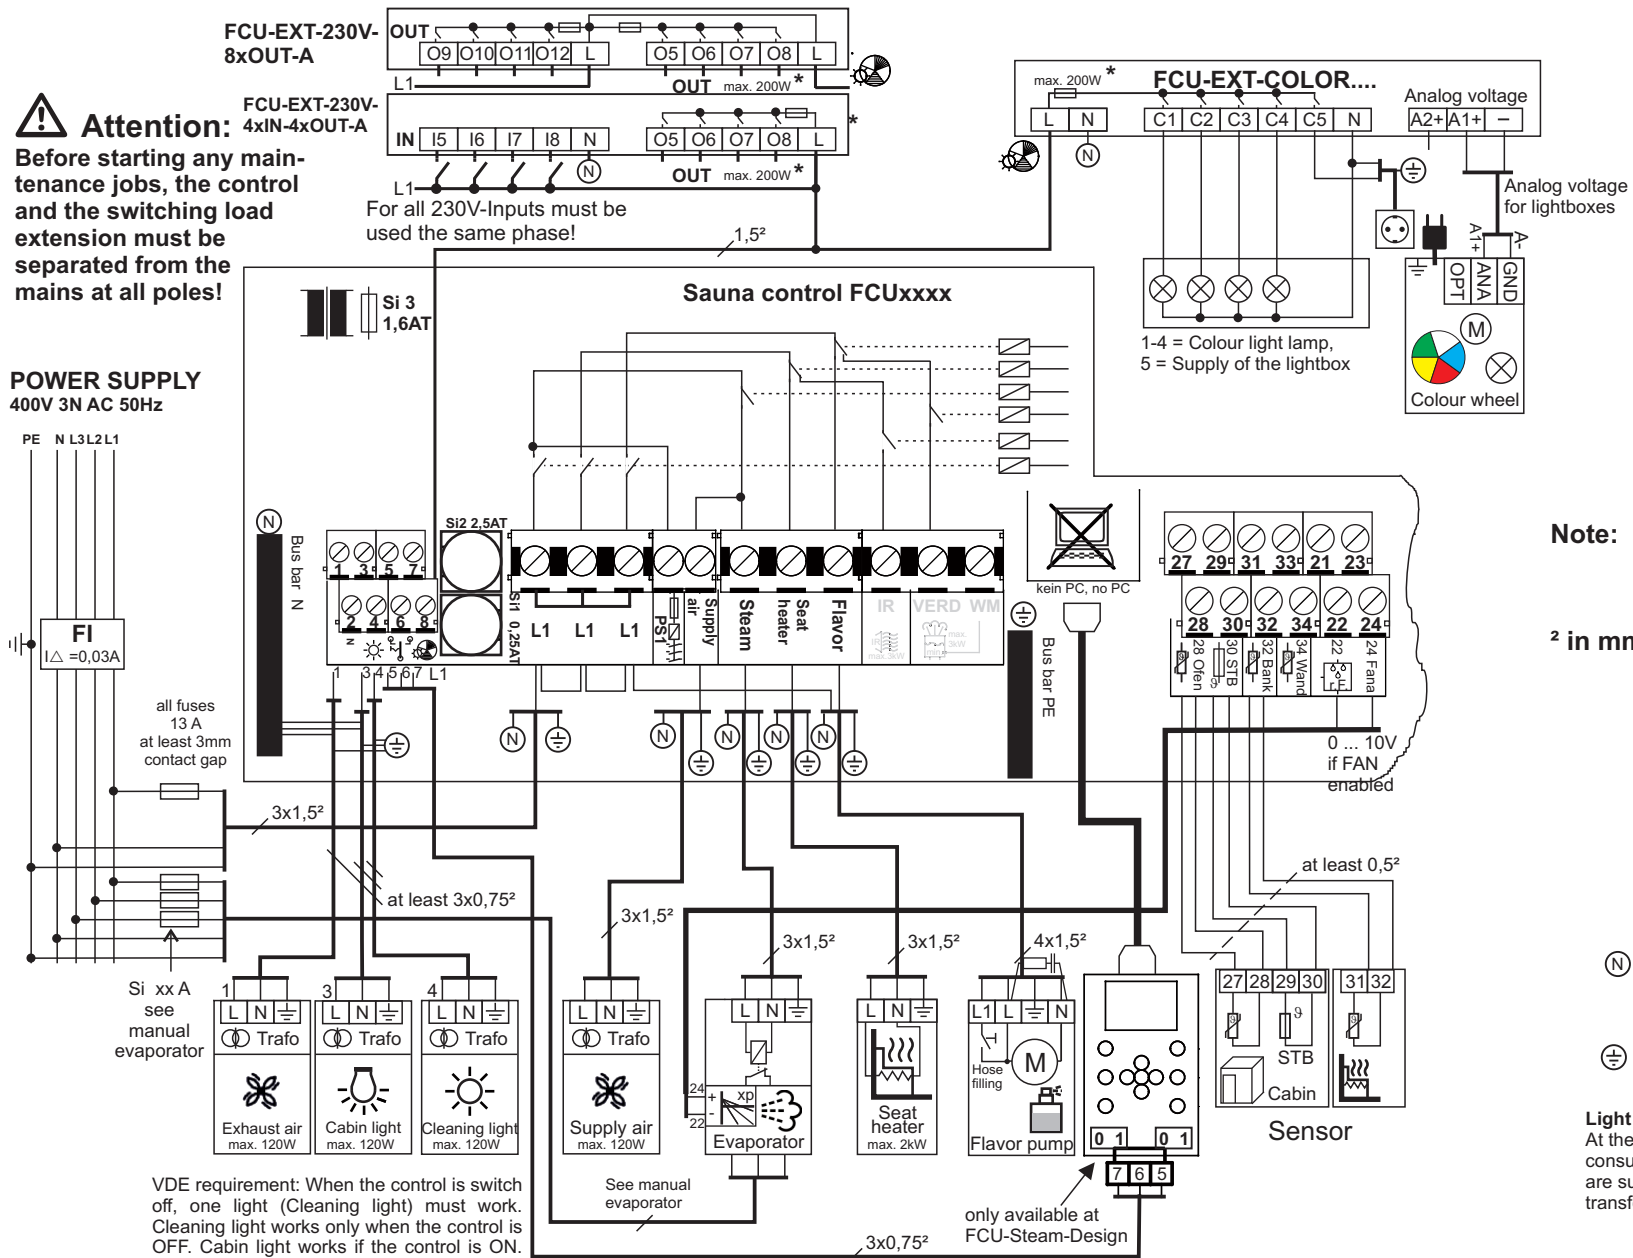

* see documents corresponding option

Note: All the cables, which lead to the cabin must be designed for a max. temperature of 150°C!

2 in mm² All cross-sections are designed for copper wires!
At AL-wires increase accordingly the cross-section!

Because of cable length, installation or special instructions the cross-section may increase!

- (N) all N-cables on bus bar N
- (PE) all PE-cables on bus bar PE

Light and fan:
At the dimmable outputs of light and fan, only 230V consumer, or for low voltage iron core transformer which are suitable for phase cut on, will be permitted. Electronic transformer for phase cut off may not be connected.