

Brief User Manual FCUxxxx-IR

<p>Status display</p> <p>Infrared 2</p> <p>Tasten Betriebsarten</p> <p>Infrared 6</p> <p>Power switch Main switch „ON“ 8 Main switch „OFF“ 9 Cleaning light „ON“ 20</p> <p>Only glas-keyboard ON/OFF-key 8/9 G</p>		<p>Menu display</p> <p>11 Temperature 12 Heating duration 13 Timer 14 Display</p> <p>Keys 15 Light 16 Fan 17 Menu 18 Navigation keys</p> <p>Power switch 19 Cleaning light „OFF“ 20 Cleaning light „ON“</p>
--	--	--

Manuel start:

- Switch on:**
Push main switch (8) and possibly key (8G) once
- Start mode:**
Push key Infrared (6) once.
The light in the key flashes

Automatic Timer-start:

- Switch on (see point 1 on the left)
- Push key ▼ or ▲ until symbol Timer (13) lights
- Select with key ↵
- Enter desired start time with keys ◀▶▼▲
- Confirm with key ↵
- Push key Infrared (6) once
- The symbol Timer (13) and the light in key (6) flash

Change the values set

- Push key ▼ or ▲ until one of the symbols Temperature (11), Heating time (12) or Timer (13) lights
- Select with key ↵
- Enter desired value with keys ◀▶▼▲
- Confirm with key ↵